 


 








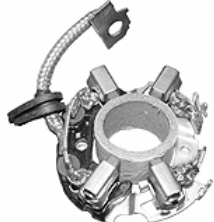

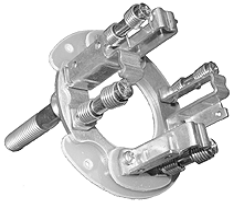
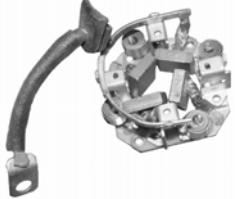 



## Bosch Brush Holder



 




Metro#	Elec. Type	Lester Used	Style	Photo
69-91011	Bosch	<b>Brush Holder Assy</b> Lester 16956, 16962, 16963, 16976, 16980, 17011, 17013, 17023, 17124, 17135, 17140, 17148, 17164, 17210, 17218, 17225, 17233, 17236, 17276, 17406, 17407, 17508, 17663, 17670, 17702, 17720, 17782	<b>PMGR-CW</b> <b>108 Series</b>	
69-91013	Bosch	<b>Brush Holder Assy</b> Lester 17038, 17047, 17082, 17149, 17150, 17226, 17227, 17237, 17408, 17410, 17497, 17698	<b>PMGR-CW</b> <b>110 Series</b>	
69-91015	Bosch	<b>Brush Holder Assy</b> Lester 17030, 17068, 17158, 17231, 17279, 17280, 17281, 17282, 17417, 17705, 17724, 17725	<b>PMGR-CCW</b> <b>110 Series</b>	





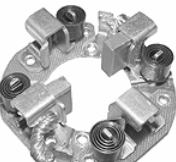

## Delco Brush Holder

Metro#	Elec. Type	Lester Used	OE#	Photo
69-1001	Delco	Brush Holder Assembly 40MT Series DD Starters	1948515	
69-1002	Delco	Brush Holder Assembly- wo/ Brushes 40MT Series DD Starters 4 Brush Type	1979387, 1979494	
69-1003	Delco	Brush Holder Assembly <b>Late Type</b> 42MT Series DD Starters wo/Brush	1988121, 1988122, 1988439	
69-1003-1	Delco	Brush Holder Assembly <b>Early Type</b> 42MT Series DD Starters wo/Brush		
69-1004	Delco	Brush Holder Assembly 50MT Series DD Starters 12 Brush Type, Brush not included <b>For 6 Brush Type, use 69-1015.</b>	1945849 1967354	
69-1005	Delco	Brush Holder Assembly 37MT Series DD Starters Early Type. Brush not included	1985303 1988323	
69-1006	Delco	Brush Holder & Rack Assembly 5MT, SD200, SD250 Series DD Starters		
69-84000	Delco	Delco – 28MT OSGR Series Starter wo/Brush	10456456	
69-1004	Delco	Brush Holder Assembly 50MT Series DD Starters 12 Brush Type wo/Brush	1945849, 1967354	
69-1008	Delco	Brush Holder Assembly 37MT, 41MT DD Starters Late Type, wo/Brushes Positive Brush Holders are insulated Spring use 69-17006	10468705 10468706 10469238 10470140	


69-1009	Delco	Brush Holder Assembly SD205, SD210, SD255, SD260	10467615	
69-1011	Delco	Brush Holder Assy. Delco 37MT, 41MT Series DD Starters Late type, wo/Brushes. Used in starters w/Terminal Post thru C.E. Plate.	10468891 10468892 10470208	
69-1014	Delco	Brush Holder Assy. Delco PG260M Series PMGR Starters	10475602	
69-1015	Delco	Brush Holder Assy. 50MT Series DD Starters 6 Brush Type, Brush not included. <b>For 12 Brush Type use 69-1004.</b>	1984974 1985065	
69-1017	Delco	Brush Holder Assy. PG260F2 <b>110mm LL</b>	10493840	No Photo Available
69-1018	Delco	Brush Holder Assy. PG260F2 <b>70mm LL</b>	10493851	No Photo Available

## Denso Brush Holder




Metro#	Elec. Type	Lester Used	kw	Rotation	Photo
69-82103	Denso	<b>Brush Holder Assy. Gold Case use</b> Lester16739, 16822, 17189, 17547 For CCW use 69-82115 OE#028510-0640	2.0	CW	
69-82106	Denso	<b>Brush Holder Assy. Gold Case use Internal Thru Bolt</b> 16236, 16248, 16249, 16251, 16578, 16585, 16586, 16600, 16672, 16674, 16758, 16759, 16760, 17100 <b>Spring use 69-82113</b>	1.0 1.4	CW	
69-82107	Denso	<b>Brush Holder – Silver Type use used on Aluminum CE Plate</b> Lester 16600, 657, 737, 800, 802, 823, 831, 834, 835, 837, 884, 905, 906, 960, 979; 17002, 003, 020, 083, 084, 091, 117, 125, 129, 197, 202, 216, 255, 256, 259, 273, 422, 423, 424, 466, 481, 485, 493, 494, 516, 517, 519, 523, 524, 525, 526, 529, 530, 532, 546, 549, 562, 573, 574, 579, 619, 668, 700, 707, 727, 735, 747, 791. <b>Brush Spring use 69-82113</b>	1.4 1.6	CW	
69-82108	Denso	<b>Brush Holder Assy</b> Lester 16804 Subaru		CCW	
69-82109	Denso	<b>Brush Holder Assy-1.0kw, 1.2kw. Golden Case use, Early</b> 16248, 251, 585, 586, 612, 676, 736, 737, 746, 761, 763, 786, 790, 821, 825, 826, 827, 828, 829, 833, 849, 878, 891, 892, 895, 913; 17007, 050, 143, 155, 171, 251, 254, 264, 265, 298, 420, 421, 457, 483, 487, 495, 520, 521, 666, 681, 682. <b>Brush Spring use 69-82113</b>	1.2	CW	
69-82110	Denso	<b>Brush Holder Assy–Early Type</b> Lester 16696, 16839, 16978, 17169, 17242, 17263, 17274, 17297, 17400, 17534, 17715, 17774 <b>Brush Spring use 69-82113</b>	1.4 1.6	CCW	
69-82115	Denso	<b>Brush Holder Assy Golden Case</b>  CW use 69-82103	2.0	CCW	

69-82118	Denso	<b>Brush Holder Silver Body use</b> 17197, 204, 240, 285, 460, 464, 465, 526, 531, 536, 537, 570, 571, 584, 629, 632, 784, 808, 823, 885, 893; 18199, 18446	1.2	CW	
69-82122	Denso	<b>Brush Holder Assy 2.0kw, CW, Silver Body use</b>  OE#028510-5800 Lester 17876	2.0	CW	
69-82127	Denso	<b>Brush Holder Assy Silver Body use</b>	1.2	CCW	
69-82130	Denso	<b>PMGR</b>  Lester 17825	1.6	CCW	
69-82502	Denso	<b>Brush Holder Assy 2.5kW, 4.5kW 12-24 Volt OSGR Starters</b> Lester 16614, 16656, 16658, 16824, 16830, 16967, 16981, 16990, 17302, 17362, 17548 OE#028510-0500	2.5 4.5	CW	
69-82505	Denso	<b>Brush Holder Assy 3.0kW, 5.5kW 12-24 Volt OSGR Starters</b> Lester 16881, 17215, 17391 OE#028510-0880	3.0 5.5	CW	





## Ford Brush Holder

Metro#	Elec. Type	Lester Used	OE#	Photo
69-2000	Ford	Brush Holder Assy. CW Ford PMGR Starters	E90Z-11061-C	

## Hitachi Brush Holder

Metro#	Elec. Type	Lester Used	OE#	Photo
69-81013	Hitachi Chrysler	Brush Holder Assy. OSGR. CW 1.8kw, 2.0kw Lester 16733, 16740, 16772, 17018, 17088, 17138 Ref# 69-8113		
69-81015	Hitachi	Brush Holder Assy. CW		
69-81018	Hitachi	Brush Holder Assy. PMGR, CW 17146, 17695, 17713, 17745 87mm LL Motor Lead Ref# 69-8118		

## Mitsubishi Brush Holder

Metro#	Elec. Type	Lester Used	OE#	Photo
69-83101	Mitsubishi	Brush Holder Assy OSGR Starters Lester 16744 (Early), 16799 (Early), 17037 Ref# 69-8301	E5PF-11434-AA E5PZ-11061-A	
69-83106	Mando Mitsubishi	Brush Holder Assy PMGR Starters Lester 16874, 888, 900, 930, 931, 933, 939, 998; 17046, 131, 132, 133, 142, 146, 151, 161, 166, 167, 176, 185, 192, 217, 221, 246, 266, 425, 448, 451, 461, 469, 470, 478, 479, 480, 505, 514, 539, 557, 559, 561, 564, 566, 599, 686, 689, 708 Ref# 69-8308	E92Z-11061-A	
69-83107	Mitsubishi	Brush Holder Assy PMGR Starters Lester 16889, 16932, 17006, 17046, 17133, 17142, 17175, 17180, 17194, 17206, 17467, 17470, 17541 Ref# 69-8309	F32Z-11061-B	
69-83108	Mitsubishi	Brush Holder Assy PMGR Lester 17561, 17564, 17738, 17740, 17749, 17754, 17783, 17795, 17797, 17829, 17836, 17837, 17838 Ref# 69-8318	23378-9E010	No Photo Available
69-83109	Mitsubishi	Brush Holder Assy Lester 17873, 17874, 17933, 17937, 17939 Ref# 69-8330		No Photo Available
69-83110	Mitsubishi	Brush Holder Assy PLGR Lester 17577, 17578 Ref#69-8312		

## Mitsuba Brush Holder

Metro#	Elec. Type	Lester Used	OE#	Photo
69-85100	Mitsuba	Brush Holder Assy. PMGR, CW Lester 17870 Ref# 69-85200	SM612-09	